



**EXTREME WASH - II
INSTALLATION:
HOT & COLD WATER CONNECTIONS**

1. Connect Cold Water Supply from Water Softener to Cold Water Manifold inlet.
2. Connect Hot Water Hose from Hot Water Tank to Hot Water Manifold.
3. Connect Hot Water Supply from Water Heater to Float Valve on Hot Water Tank.
4. Connect Hydrominder Supply Tubing to Cold Water Manifold.

