


VOICE BOARD ALARM SWITCH



TOUCH SELECT 1 10 POSITION DOOR

TOUCH SELECT 2 12 POSITION DOOR

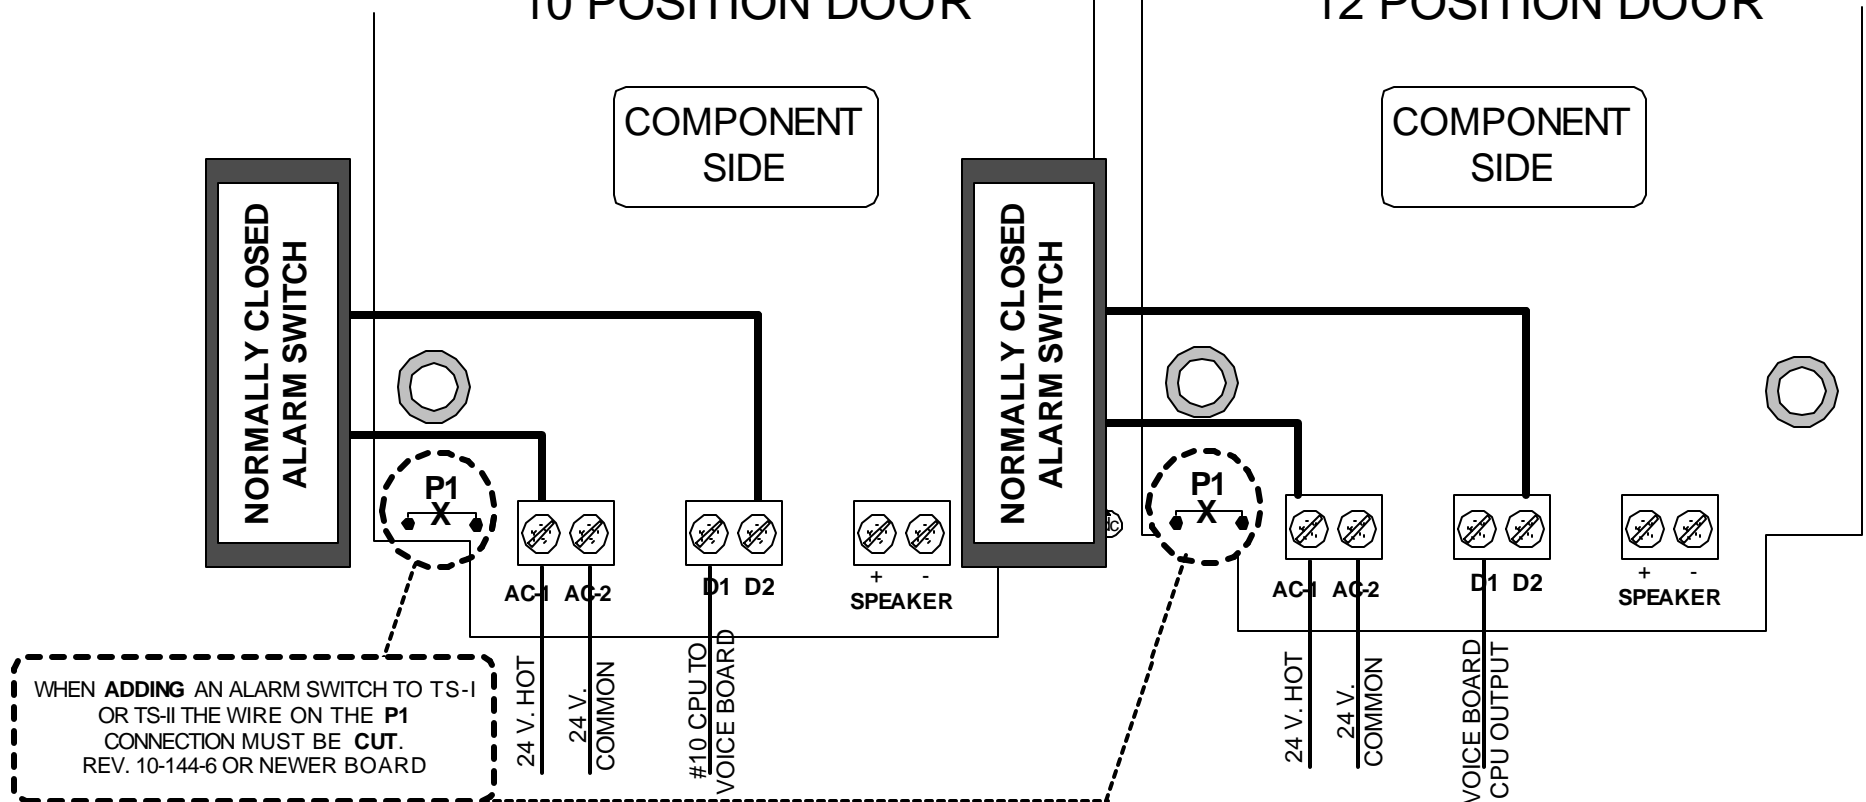

WHEN **ADDING** AN ALARM SWITCH TO TS-I OR TS-II THE WIRE ON THE P1 CONNECTION MUST BE **CUT**.
REV. 10-144-6 OR NEWER BOARD

NOTICE: ALL ALARM SWITCHES MUST BE ADJUSTED FOR SENSITIVITY. REMOVE COVER - INCREASE OR DECREASE SENSITIVITY.